



2 Pull the air filter housing outward slightly and disconnect the 2 hoses at the back of the housing See **Figure 70** and **Figure 71**

3 Remove the screws from the backside of the housing and remove the chrome plate and hose (**Figure 72**)

4 Remove the air filter (**Figure 73**)

5 Tap the element lightly to remove most of the dirt and dust, then apply compressed air to the inside surface of the element

6 Inspect the element and make sure it is in good condition Make sure the air filter sealing surface (**Figure 74**) is not torn Replace if necessary

7 Clean the inside of the air box with a shop rag and cleaning solvent Remove any foreign matter that may have passed through a broken cleaner element

8 Assemble the air filter housing assembly When installing the air filter housing make sure that the 2 hoses (**Figure 71**) are connected to the filter housing (**Figure 70**)

Crankcase Breather Hose

Inspect the hose for cracks and deterioration and make sure that the hose clamps are tight (**Figure 75**)

